Nikon

En

COOLPIX S3

DIGITAL CAMERA

Quick Start Guide

Package Contents pg. 2

Taking Pictures pg. 3

Bundled software
PictureProject pg. 13

Package Contents

Check that you have all the items listed below.

NOTE: A memory card is not included with the camera.

COOLPIX S3 digital camera

Camera strap

EN-EL8 rechargeable battery (with terminal cover)



MV-11 / MV-11B COOL-STATION*



EH-63 AC adapter† (with power cable)



UC-E10 USB interface cable



EG-E5000 audio/video cable

Quick Start Guide (this guide)

Guide to Digital Photography with the COOLPIX S3

Warranty

PictureProject installer CD (yellow)

PictureProject reference manual CD (silver)

* An MV-11 or MV-11B is provided, depending on the color of the camera body.
† Shape of cord depends on country of use.

Use Only Nikon Brand Electronic Accessories

Nikon COOLPIX cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including battery chargers, batteries, and AC adapters) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry.

THE USE OF NON-NIKON ELECTRONIC ACCESSORIES COULD DAMAGE THE CAMERA AND MAY VOID YOUR NIKON WARRANTY. The use of third-party rechargeable Li-ion batteries not bearing the Nikon holographic seal* could interfere with normal operation of the camera or result in the batteries overheating, igniting, rupturing, or leaking.

For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

* Holographic seal: Identifies this device as an authentic Nikon product.

Step 1 Attach the camera strap

Attach the strap as shown.

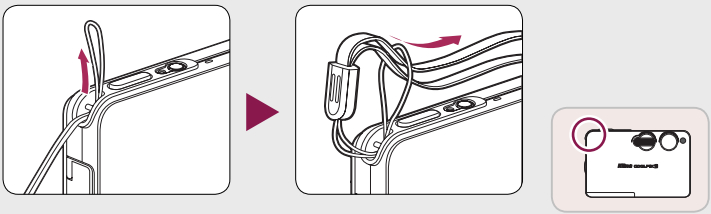

Step 2 Charge the battery

After inserting the battery, place the camera in the supplied MV-11 / MV-11B COOL-STATION for charging.

1 **Connect the EH-63 AC adapter to the COOL-STATION**

1. Connect the AC power cord to the AC adapter.
2. Plug the DC cord into the COOL-STATION's DC-IN connector.
3. Plug the AC power cord into a wall outlet. The power lamp on the AC adapter will light (4).

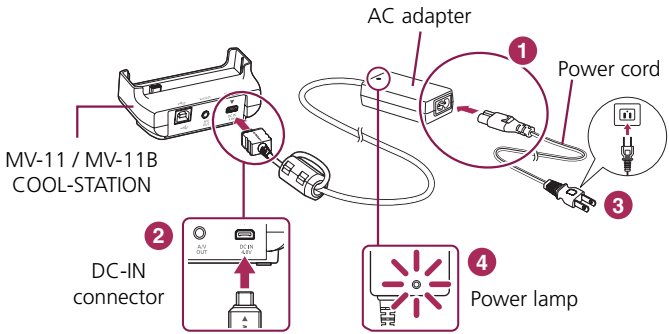

2

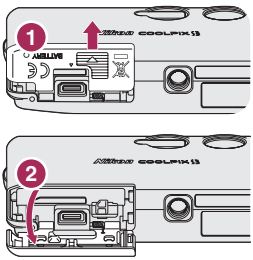

Open the battery-chamber cover

Slide the battery-chamber cover in the direction shown (1), stopping when the cover opens (2).

3

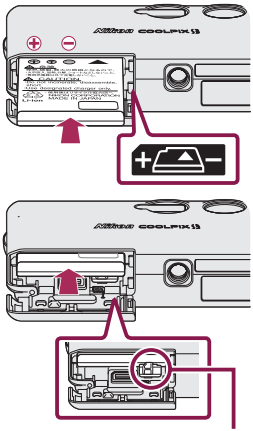

Insert the battery

Insert the battery as shown in the label at the entrance to the battery chamber, making sure that the positive ("+") and negative ("–") terminals are in the correct orientation.

Inserting the battery upside down or backwards could damage the camera. Be sure that the battery is in the correct orientation.

When the battery is fully inserted, the orange battery latch will pop up, locking the battery in place.

battery latch

4

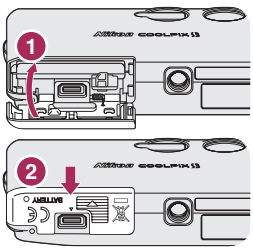

Close the battery-chamber cover

Close the cover (1) and slide it in until it latches (2).

5 Place the camera in the COOL-STATION

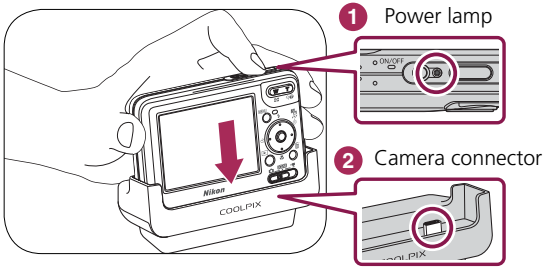

1. Confirm that the camera power-on lamp is off. ***The battery will not charge while the camera is on.***
2. Place the camera in the COOL-STATION with the monitor towards you, making sure that the connector is fully inserted in the matching connector on the COOL-STATION.

6

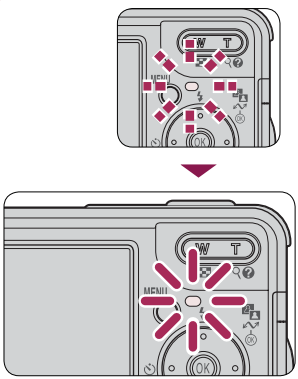

Charge the battery

The indicator next to the camera monitor will blink green while the battery charges.

An exhausted battery will recharge in about two hours.

Charging is complete when the indicator stops blinking. Remove the camera from the COOL-STATION and unplug the AC adapter.

Step 3 Turn the camera on

1

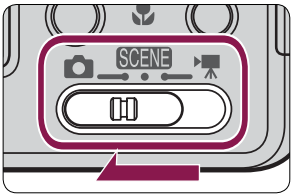

Select mode
Slide the mode selector to (auto mode).

2

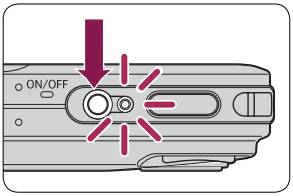

Turn the camera on
Press the power switch until the power-on lamp lights.

Auto Power off (Stand-by Mode)

If no operations are performed for about five seconds in shooting mode, the monitor will gradually dim to save power. Full brightness can be restored by pressing the shutter-release button or operating any of the controls next to the monitor. If no operations are performed for about a minute, the monitor will turn off altogether and the camera will enter stand-by mode, further reducing the drain on the battery. The display can be reactivated by pressing the shutter-release button halfway. The camera will turn off automatically if no operations are performed for another three minutes.

See the *Guide to Digital Photography* for more information on the options available for auto power off.

Step 4 Choose a language and set the clock

The first time the camera is turned on, a language-selection dialog will be displayed in the monitor. Follow the steps below to choose a language and set the time and date.

Use the multi selector to navigate the menus.

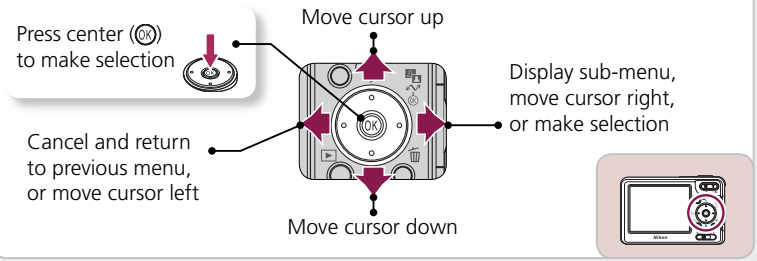
Press center (OK) to make selection
Move cursor up
Display sub-menu, move cursor right, or make selection
Cancel and return to previous menu, or move cursor left
Move cursor down

1

Highlight language.

2

Confirmation dialog displayed.

3

Highlight **Yes**.

4

TIME ZONE menu displayed.*

* To turn daylight saving time on or off, press multi selector down to highlight **DaylightSaving** and press OK button of multi selector. When **DaylightSaving** is checked, time will automatically be advanced one hour. To return to Step 4, press multi selector up to highlight current time zone.

5

Display map of world time zones.

6

Select home time zone.

7

Display DATE menu.

8

Edit **D**ay (order of **D**ay, **M**onth, and **Y**ear may differ in some areas).

9

Select **M**onth. Repeat 8–9 to edit **M**onth, **Y**ear, hour, and minute.

10

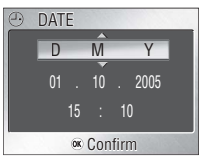

Highlight **D M Y**.

11

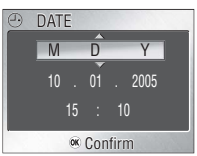

Choose order in which **D**ay, **M**onth, and **Y**ear will be displayed.

12

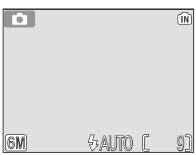

Exit to shooting mode.

Step 5 Take pictures

Picture Storage

Pictures are stored either in the camera's 12 MB internal memory or on removable memory cards. In the description that follows, pictures are stored in internal memory. For information on using memory cards, see page 10 of the *Guide to Digital Photography*.

1 Check indicators in the monitor

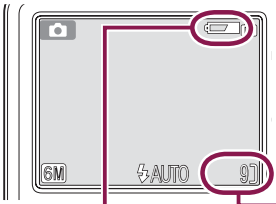

Number of exposures remaining

Battery level indicator: Battery level is shown as follows:

Display	Description
NO ICON	Battery fully charged.
	Low battery. If flash fires, monitor will turn off while flash recharges. Prepare to recharge or change battery.
WARNING!! BATTERY EXHAUSTED	Battery exhausted. No pictures can be taken until battery has been recharged or replaced with fully-charged spare battery.

2 Ready the camera

Hold the camera steadily in both hands.

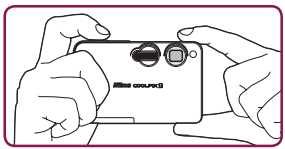

Important

Don't Block the Shot

To avoid dark or partially obscured pictures, keep your fingers and other objects away from the lens and flash window.

3 Frame the subject

Position the subject in the center of the frame and use the zoom buttons to compose the picture.

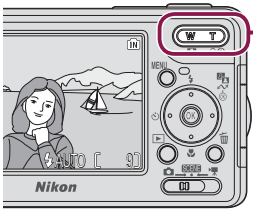

Zoom buttons: Press **T** to zoom in on the subject so that it fills a larger area of the frame. Press **W** to zoom out, increasing the area visible in the frame.

The COOLPIX S3 has a two-stage shutter-release button. Pressing the shutter-release button halfway focuses the camera. Pressing it the rest of the way down releases the shutter to record a picture.

4

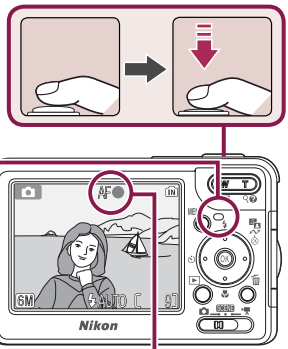

Focus

Press the shutter-release button halfway to set focus and exposure. In mode, the camera will automatically focus on the subject at the center of the frame. Focus and exposure will lock while the shutter-release button is pressed halfway.

With the shutter-release button pressed halfway, check the focus and flash indicators:

Focus indicator AF●	On (green)	Subject in focus.
	Blinks red	Camera unable to focus. Change composition and try again.

Indicator lamp (flash lamp)	On (red)	Flash will fire when picture is taken.
	Blinks red	Flash charging.
	Off	Flash off or not required.

5

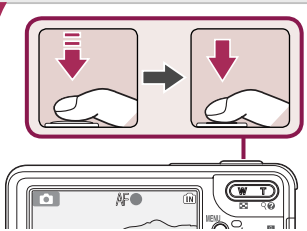

Take the picture

Press the shutter-release button the rest of the way down to take the picture. To prevent blur, press the shutter-release button down smoothly.

Step 6 View pictures

1

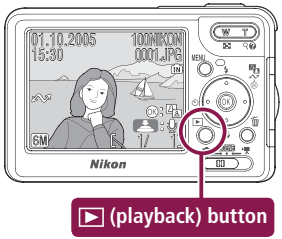

▶ (playback) button

Press the ▶ button

A picture will be displayed in the monitor.

When the camera is off, pressing the ▶ button for about one second will turn the camera on with a picture displayed in the monitor.

2

View previous picture

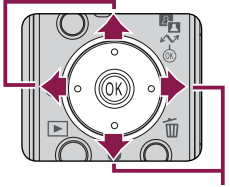

View next picture

View additional pictures

Press the multi selector down or right to view pictures in the order recorded, up or left to view pictures in reverse order. Keep the multi selector pressed to scroll quickly to the desired frame.

To return to shooting mode, press the ▶ button again.

3

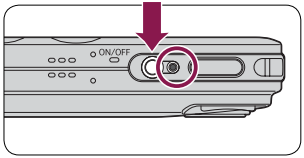

Turn the camera off

Press the power switch. The camera is off when the power-on lamp is off.

Now that you've taken a few pictures, you can install PictureProject and transfer (copy) them to your computer as described on the following pages.

PictureProject

Once the supplied PictureProject software has been installed, pictures can be transferred to a computer for easy viewing and storage.

System Requirements for PictureProject

Windows

pg. 14

CPU	300 MHz Pentium or better recommended (550 MHz Pentium III or better for muvee option)
OS	Preinstalled versions of Windows XP Home Edition, Windows XP Professional, Windows 2000 Professional, Windows Millennium Edition (Me), or Windows 98 Second Edition (SE)
Hard disk space	60 MB required for installation
RAM	Minimum 64 MB (128 MB with muvee option)
Video resolution	800 × 600 or more with 16-bit color (High Color) or better
Miscellaneous	Only computers with built-in USB ports supported

Macintosh

pg. 18

OS	Mac OS X version 10.1.5 or later (version 10.2.8 or later required for Burn Disc option)
Hard disk space	60 MB required for installation
RAM	Minimum 64 MB
Video resolution	800 × 600 or more with 16-bit color (thousands of colors) or better
Miscellaneous	Only computers with built-in USB ports supported

For the latest information on supported operating systems, visit:

- *http://www.europe-nikon.com/support* (for users in Europe and Africa)
- *http://www.nikon-asia.com/* (for users in Asia, Oceania, and the Middle East)

Important

Other Nikon Software (Nikon View/Nikon Capture)

Uninstall Nikon View before installing PictureProject. For information on using PictureProject with Nikon Capture, see the *PictureProject Reference Manual* (on CD).

Install PictureProject Windows

Important

Windows XP/Windows 2000

Log on to an account with administrator privileges when installing or uninstalling PictureProject under Windows XP Home Edition, Windows XP Professional, or Windows 2000 Professional.

1 Turn the computer on and wait for Windows to start up.

Before proceeding to the next step, turn off any virus-checking software and exit any other applications that may be running.

2 Insert the PictureProject installer CD into the CD-ROM drive. The Install Center program will launch automatically and a "Select Region" dialog will be displayed. Select a region and click **Next**. (The "Select Region" dialog is not displayed in the European release of PictureProject. European users can proceed directly to Step 3.)

Select Region
Welcome to the world of Nikon Digital photography. Please select a Region from the choices below.
Region:
For users in Asia
For users in Asia
For users in Canada
For users in the Middle East
For users in Africa
For users in Oceania

3 A language selection dialog will be displayed. Select a language and click **Next**.

If the "Select Region" or "Select Language" Dialog Is Not Displayed

Open the "My Computer" window by selecting **My Computer** from the **Start** menu (Windows XP Home Edition/Windows XP Professional) or by double-clicking the **My Computer** icon on the desktop (other versions of Windows) and then double-click the CD (PictureProject) icon.

4

Click **Easy Install** to begin installation of the following software:

- PTP drivers for COOLPIX-series cameras (Windows XP only)
- Nikon Mass Storage Camera Drivers (Windows 98SE only)
- Panorama Maker
- Apple QuickTime 6
- PictureProject
- Nikon FotoShare (Europe only)
- Microsoft DirectX 9

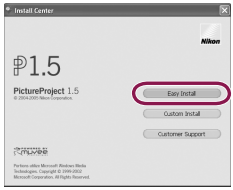

5

The first components to be installed are the camera drivers. The drivers installed depend on the computer's operating system:

- **Windows XP**: Follow the on-screen instructions to install the PTP driver (on some systems the driver may be installed by a wizard).

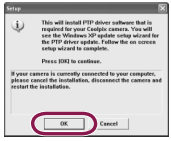
Setup
This will install PTP driver software that is required for your Coolpix camera. You will see the Windows XP update setup wizard for the PTP driver update. Follow the on-screen setup wizard to complete.
Press [OK] to continue.
If your camera is currently connected to your computer, please cancel the installation, disconnect the camera and restart the installation.
OK
Cancel

- **Windows 2000/Windows Me**: No drivers are installed. Proceed to Step 6.
- **Windows 98SE**: Follow the on-screen instructions to install the Mass Storage Drivers.

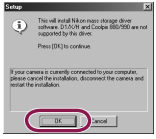
Setup
This will install Nikon mass storage driver software. D1/D1H and Coolpix 880/950 are not supported by this driver.
Press [OK] to continue.
If your camera is currently connected to your computer, please cancel the installation, disconnect the camera and restart the installation.
OK
Cancel

6

The Panorama Maker install wizard will start. Follow the on-screen instructions to complete installation.

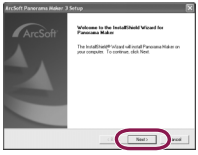
ArcSoft Panorama Maker 3 Setup
ArcSoft
Welcome to the InstallShield Wizard for Panorama Maker
The InstallShield® Wizard will install Panorama Maker on your computer. To continue, click Next.
Next >
Cancel

7

Click **Yes** to install QuickTime.



8 The Nikon FotoShare setup program will start (Europe only). Follow the on-screen instructions to complete installation.

9 The PictureProject setup program will now start. After reading the license agreement, click **Yes** to accept the agreement and proceed with installation.

PictureProject Setup
License Agreement
Please read the following license agreement carefully.
Press the PAGE DOWN key to see the rest of the agreement.
Nikon Corporation
License Agreement
This Nikon License Agreement ("Agreement") is a legal agreement between you (either an individual or single entity) and Nikon Corporation ("Nikon") setting forth the terms and conditions for your use of the Nikon SOFTWARE accompanying this Agreement which includes computer SOFTWARE and may include associated media, printed materials, and "online" or electronic documentation ("SOFTWARE").
By installing, downloading and/or using the SOFTWARE, you indicate your acceptance
Do you accept all the terms of the preceding License Agreement? If you select No, the setup will close. To install PictureProject, you must accept this agreement.
Yes
No

10 Click **Next** to install PictureProject to the location shown under "Destination Folder," or click **Browse...** to choose a different folder. Complete the following steps:

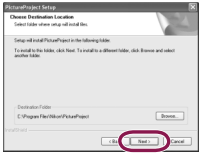
PictureProject Setup
Choose Destination Location
Select folder where setup will install files.
Setup will install PictureProject in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\Nikon\PictureProject
Browse...
InstallShield
< Back
Next >
Cancel

1. Click **Yes** when prompted to create a new folder.
2. To create a shortcut to PictureProject on the desktop, click **Yes** when prompted.
3. Click **Finish** to exit the PictureProject installer.

11 Panorama Maker and muvee options require DirectX version 9 or later. If an earlier version is installed, the dialog shown at right will be displayed. Follow the on-screen instructions to install DirectX 9.

Welcome to setup for DirectX
The DirectX setup wizard guides you through installation of DirectX Runtime Components. Please read the following license agreement. Press the PAGE DOWN key to see the rest of the agreement. You must accept the agreement to continue the setup.
MICROSOFT DirectX 9.0c
SUPPLEMENTAL END-USER LICENSE AGREEMENT FOR MICROSOFT SOFTWARE ("Supplemental EULA")
IMPORTANT: READ CAREFULLY - These Microsoft Corporation ("Microsoft") operating system components, including any "online" or electronic documentation ("OS Components") are subject to the terms and conditions of
I accept the agreement
I don't accept the agreement
Next >
Cancel

12 Click **Finish** or **Yes** to restart the computer.

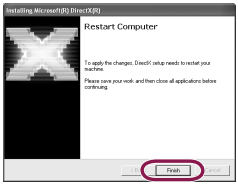
Restart Computer
To apply the changes, DirectX setup needs to restart your machine.
Please save your work and then close all applications before continuing.
Finish

Displayed if DirectX is installed

Displayed if DirectX is not installed

13 When the computer restarts, the PictureProject Import Assistant will be displayed.

The Import Assistant is used to catalog pictures already on the computer for display in PictureProject. To proceed without cataloging existing pictures, click **Close** (existing pictures can be cataloged manually at any time; see the PictureProject reference manual for details).

For more information on importing pictures into PictureProject, see the *PictureProject Reference Manual* (on CD).

14 Remove the PictureProject installer CD from the CD-ROM drive.

Software updates

If the computer is connected to the Internet, PictureProject will periodically check for updates. If an update is detected when PictureProject starts, an update dialog will be displayed. Follow the on-screen instructions to update to the latest version of PictureProject.

This completes installation of PictureProject. The next step is to transfer pictures to your computer as described on page 22.

Install PictureProject Macintosh

Installing or Uninstalling PictureProject

Log on to an account with administrator privileges when installing or uninstalling PictureProject.

1 Turn the computer on and wait for it to start up.

Before proceeding to the next step, turn off any virus-checking software and exit any other applications that may be running.

2 Insert the PictureProject installer CD into the CD-ROM drive. Double-click the PictureProject installer CD icon on the desktop, then double-click the **Welcome** icon. The "Select Region" dialog will be displayed. Select a region and click **Next**. (The "Select Region" dialog is not displayed in the European release of PictureProject. European users can proceed directly to Step 3.)


Select Region
Welcome to the world of Nikon Digital photography. Please select a region from the choices below.
For users in Asia
For users in Canada
For users in the Middle East
For users in Africa
For users in Oceania

3 A language selection dialog will be displayed. Select a language and click **Next**.

Select Language
Welcome to the world of Nikon Digital photography. Please select a language from the choices below.
Language: English
Quit
Next

4 Click **Easy Install** to begin installation of the following software:

- Panorama Maker
- PictureProject
- Apple QuickTime 6 (if required)

Once installation is complete, European users can install Nikon FotoShare by copying the "FotoShare" icon to the hard disk (Step 12).

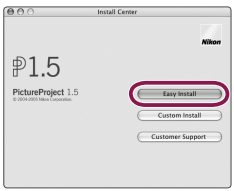

5 The Panorama Maker installer will start. Follow the on-screen instructions to complete installation.

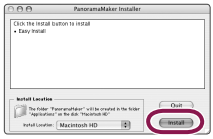

6 The message shown at right will be displayed (Europe only; users in other areas can proceed directly to Step 7). Click **OK**.

Install Center
Dear Mac User,
You can make the most of your new camera by sharing your pictures using Nikon FotoShare2 it's the easiest and most satisfying way to let family and friends enjoy your pictures, and it's free from Nikon.
Just copy the FotoShare icon from the CD ROM to the applications folder on your Mac and click on the FotoShare icon.
Then drag your pictures from PictureProject into the FotoShare window, type your message and share! (requires on-line connection, registration of username and password)
OK

7 Enter your administrator name and password and click **OK**.

8 The PictureProject license agreement will be displayed. After reading the license agreement, click **Accept** to accept the terms and conditions of the agreement and view the ReadMe file. Take a few moments to read this file, which may contain important information that could not be included in this manual. After viewing the ReadMe file, click **Continue** to proceed with installation.

9

The PictureProject installer will start. Click **Install** and follow the steps below:

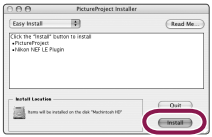

1. To have PictureProject Transfer start automatically when the camera is connected, click **Yes** when prompted.
2. Click **Yes** to add PictureProject to the Dock.
3. Click **Quit** to exit the PictureProject installer.

Apple QuickTime 6

If an earlier version of QuickTime is installed, the QuickTime 6 installer will start automatically. Follow the on-screen instructions to complete installation. When the dialog shown at right is displayed, click **Continue**. Do ***not*** complete the "Registered To," "Organization," and "Registration Number" fields.

Registration
Enter your QuickTime 6 Pro registration number. The Registered To and Registration Number must exactly match your registration information.
If you do not have a registration number, leave the field blank and click Continue. You can enter it later using the QuickTime System Preferences.
QuickTime
Registered To:
Organization:
Registration Number:
Continue

On some systems, the QuickTime installer may require considerable time to complete installation.

10

Click **Restart** to restart the computer.

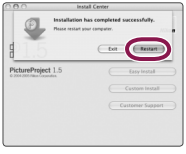

Displayed if QuickTime 6 is not installed

Displayed if QuickTime 6 is installed

11 When the computer restarts, log in to the "Admin" account. The PictureProject Import Assistant will be displayed.

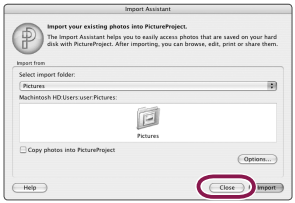
Import Assistant
Import your existing photos into PictureProject.
The Import Assistant helps you to easily access photos that are saved on your hard disk with PictureProject. After importing, you can browse, edit, print or share them.
Import from:
Select import folder:
Pictures
Machintosh HD:Users:user:Pictures:
Pictures
Copy photos into PictureProject
Options...
Help
Close
Import

The Import Assistant is used to catalog pictures already on the computer for display in PictureProject. To proceed without cataloging existing pictures, click **Close** (existing pictures can be cataloged manually at any time; see the PictureProject reference manual for details).

For more information on importing pictures into PictureProject, see the *PictureProject Reference Manual* (on CD).

12 After exiting the Import Assistant, open the "FotoShare" folder on the PictureProject installer CD and install Nikon FotoShare by dragging the **Nikon FotoShare** icon to the "Applications" folder on the hard disk (note that FotoShare is included only with the European release of PictureProject). When copying is complete, remove the PictureProject installer CD from the CD-ROM drive.

Software updates

If the computer is connected to the Internet, PictureProject will periodically check for updates. If an update is detected when PictureProject starts, an update dialog will be displayed. Follow the on-screen instructions to update to the latest version of PictureProject.

This completes installation of PictureProject. The next step is to transfer pictures to your computer as described on the following page.

View pictures on a computer

Important

Connecting the Camera to a Computer

Be sure to install PictureProject before connecting the camera to your computer. If the Add New Hardware Wizard is displayed when the camera is connected, click **Cancel** to exit the wizard.

1 Turn the camera off. If you will be transferring pictures from a memory card to the computer, insert the card in the camera. After making sure that the camera power-on lamp is off, place the camera in the COOL-STATION.

2 Start the computer and connect it directly to the COOL-STATION using the supplied UC-E10 USB cable. Do not connect the COOL-STATION via a USB hub or keyboard.

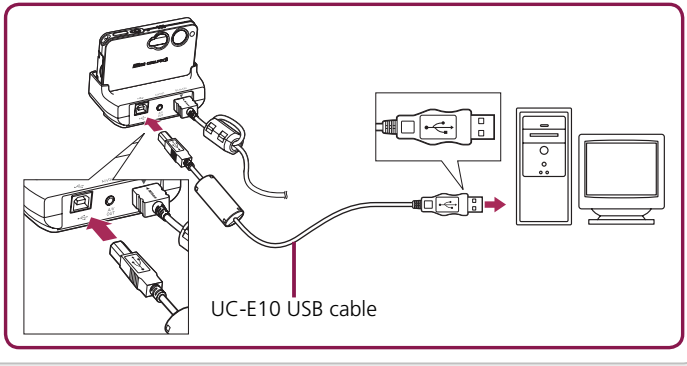

3 Turn the camera on. PictureProject Transfer will be displayed in the computer monitor; click **Transfer** to transfer all pictures in internal memory to the computer or, if an memory card is inserted in the camera, to transfer all pictures on the card to the computer.

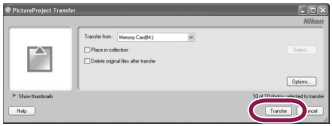

Windows

Macintosh

AutoPlay (Windows XP Home Edition/Professional)

A dialog similar to that shown at right will be displayed when the camera is turned on. Select **Copy pictures to a folder on my computer using PictureProject** and click **OK** to start PictureProject. To bypass this dialog in the future, check **Always do the selected action**.

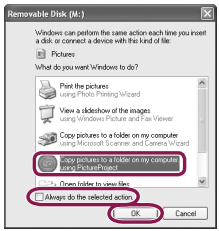
Removable Disk (M:)
Windows can perform the same action each time you insert a disk or connect a device with this kind of file.
Pictures
What do you want Windows to do?
Print the pictures
using Photo Printing Wizard
View a slideshow of the images
using Windows Picture and Fax Viewer
Copy pictures to a folder on my computer
using Microsoft Scanner and Camera Wizard
Copy pictures to a folder on my computer
using PictureProject
Open folder to view files
Always do the selected action.
OK
Cancel

See the PictureProject reference manual (on CD) for information on what to do if PictureProject Transfer fails to start automatically.

Important

During Transfer

While transfer is in progress, do not:

- Disconnect the USB cable
- Turn the camera off
- Remove the camera from the COOL-STATION
- Disconnect the AC adapter

Failure to observe this precaution could interfere with normal functioning of both the camera and the computer.

4 The pictures will be displayed in PictureProject when transfer is complete.

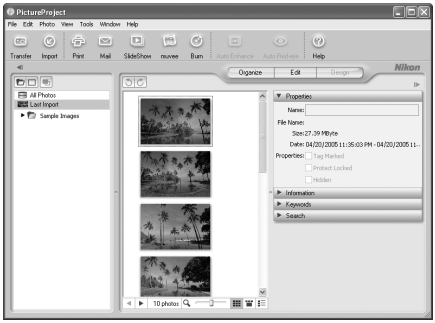

Windows

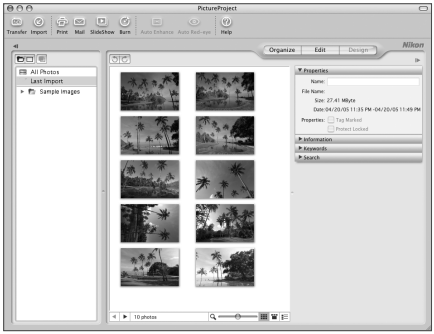

Macintosh

The main controls in the PictureProject window are shown below:

Organize button: Click to view and organize pictures.

Edit button: Click to enter edit mode, where you can crop pictures, adjust brightness and hue, and use other retouch tools.

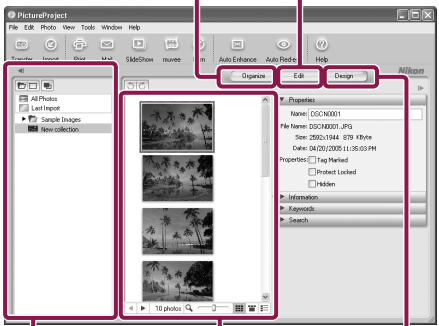

Collection list: Group pictures into collections.

Design button: Click to arrange pictures in a variety of layouts.

Picture list: View the pictures in the current collection or folder.

PictureProject can also be used for a variety of other tasks, including printing pictures, sending pictures by e-mail, viewing slide shows, creating muvee videos (Windows only), and copying pictures to CD or DVD (requires Windows or Mac OS X version 10.2.8 or later) .

5 Once transfer is complete and your pictures are displayed in PictureProject, you can disconnect the camera.

Disconnecting the Camera

Before turning the camera off or disconnecting the USB cable, remove the camera from the system as described below.

Windows XP Home Edition/Windows XP Professional

Click the "Safely Remove Hardware" icon in the taskbar and select **Safely remove USB Mass Storage Device** from the menu that appears.

Windows 2000 Professional

Click the "Unplug or Eject Hardware" icon in the taskbar and select **Stop USB Mass Storage Device** from the menu that appears.



Windows Millennium Edition (Me)

Click the "Unplug or Eject Hardware" icon in the taskbar and select **Stop USB Disk** from the menu that appears.



Windows 98 Second Edition (SE)

In My Computer, click with the right mouse button on the removable disk corresponding to the camera and select **Eject** from the menu that appears.

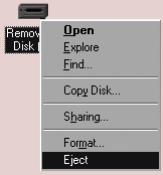

Macintosh

Drag the camera volume ("NO NAME") into the Trash.

You have now taken pictures and copied them to your computer. This completes the *COOLPIX S3 Quick Start Guide*. To make the most of all the features of your Nikon digital camera, be sure to read the *Guide to Digital Photography*.

Viewing the PictureProject Reference Manual

The PictureProject manual may be found on the PictureProject reference manual CD.

1. Insert the PictureProject reference manual CD in a CD-ROM drive.

2. Double-click the CD icon.
   - **Windows**: Open "My Computer" and double-click the CD (**Nikon**) icon.
   - **Macintosh**: Double-click the CD (**Nikon**) icon on the desktop.

3. Double-click the **INDEX** or **INDEX.pdf** icon to display a language-selection screen. Clicking a language displays an index of the documentation available for PictureProject; click a title to view.

Do More with the COOLPIX S3!

D-Lighting

Bring out details in shadows.

Page 43

PictBridge Printing

Print pictures via direct USB connection.

Page 52

Advanced Red-Eye Reduction

Reduce "red-eye."

Page 18

Face-priority AF

Let the camera find the focus point for portraits.

Page 24

Voice Recordings

Record and play audio.

Page 33

Movies

Record movies—with sound.

Page 36

Underwater Mode

Use the optional WP-CP5 waterproof case to take pictures at depths of up to 40 m.

Page 31

Page numbers refer to the *Guide to Digital Photography*.

NIKON CORPORATION
Fuji Bldg., 2-3 Marunouchi 3-chome,
Chiyoda-ku,Tokyo 100-8331, Japan

Printed in Japan
SB5G00800101(11)
6MA11511--